

RFCASTERS

Set of 4 heavy-duty, 3" diameter, smooth rolling, full-swivel casters (see Fig. 1) add maximum mobility to your Rack. Casters mount by screw-in shaft that links soundly to steel corner connectors. Locking system is by means of tooth-in-gear system for fail-safe rack lock-down. Twin-wheels roll independently for effortless rolling. Weight capacity per set of 4 casters -400 pounds. See Fig. 2 below for caster details & dimensions. Weight per set of 4 casters is 1.8 lbs.



Fig. 1

When installing the optional twin-wheel casters on the bottom of your Rack, a thin open-ended box wrench (5/8") will permit a tight fit and reduce the likelihood of stress on the caster shaft.

Fig. 3 shows a typical 5/8" open-ended box wrench being used for this purpose; tightening the twin-wheel caster. Simply screw the twin-wheel caster into the 5/16" threaded hole on the bottom of the 4 lower connecting corners. Hand tighten the twin-wheel casters and perform secure tightening with your 5/8" open-ended box wrench.

IMPORTANT: Make sure tightening nut on twin-wheel caster secures firmly against bottom of cast connecting corner.

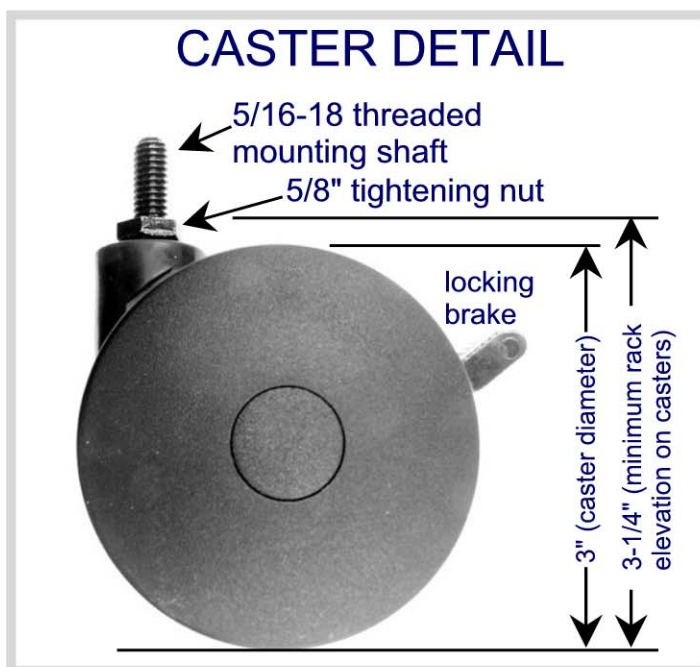


Fig. 2

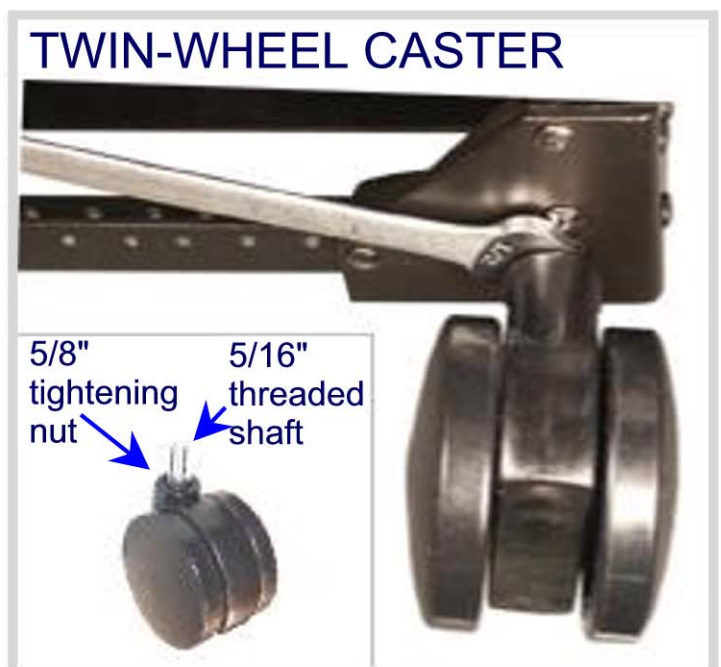


Fig. 3